

### Accept call and speak

Pick up receiver > key 7 > microphone is activated



### Open door

Pick up receiver > key 1



### Turn on light

Pick up receiver > key 3



### Video recording in case of suspicion

Pick up receiver > key 9



### Turn doorbell to mute

Pick up receiver > 3x key \* > key 1 > press key 1 repeatedly until profile 0 is activated > key \* > doorbell is muted



Turn doorbell back on: Activate profile 1

### Change volume of receiver

Line key > key F1 > pick up receiver > arrow keys



## Access latest message

Pick up receiver > key \* > key 1 > key 2




## View video recordings

Pick up receiver > 2x key \* > player mode is activated




## Move camera image

Pick up receiver > key 2 (up), key 8 (down), key 6 (right), key 4 (left); key 0 (default view); alternatively, arrow keys can be used

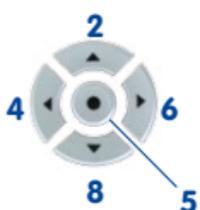

## Zoom camera image

Pick up receiver > key 5 (zoom mode is activated), key 2 (zoom in), key 8 (zoom out), key 0 (default view); alternatively, arrow keys can be used

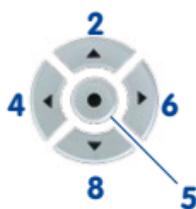

## Status icons

	Door open		Light on
	Door closed		Microphone mute
	Door locked		Recording on
	Door unlocked		Latest message
	Error/Manipulation		Camera error

Main menu



Display of status

Sub menu

Arrow keys

Hands-free mode

## Open door with blue user card

Hold up user card > door is unlocked



## Open door with PIN code

Enter PIN code > press key button > door is unlocked



PIN code

## Open door on power failure (red LED flashes every 4 sec)

Press ESC/ALARM (until sound signal/lighting is on) > opening the door with card and PIN is possible now



keep pressed



## Leave a message (for standard mailbox)

Press envelope key > welcome message plays > keep envelope key pressed and leave message



Welcome message



keep pressed

Message

## Play back messages\*

Hold up user card > keys 0 – 9 blink: 0 – 9 new messages > play back with keys 0 – 9



Messages

## Record new welcome message (for standard mailbox)\*

Press OK/MENU and hold the key > hold up user card > press bell key > press bell key again > keep envelope key pressed and leave message > let go of envelope key > welcome message is activated



keep pressed



keep pressed

Status LEDs ● ●



<span style="color: green;">●</span> on	Normal status
<span style="color: red;">●</span> on	Device error
flashes every 4 sec	Emergency operation



## Open door (also on power failure)

Keep door opener key pressed for **3 seconds**



## Confirm message display (green LED blinks every 2 sec)

Press door opener key briefly



## Switch doorbell on/off

Press doorbell key (left) briefly > doorbell is switched on or off



## Change volume

Keep doorbell key (left) pressed for **2 seconds** (until double sound signal)



**Lower:** Press doorbell key (left) briefly

**Higher:** Press door opener key (right) briefly

## Change ring tone

Keep doorbell key (left) pressed for **2 seconds** (until double sound signal) > press both keys at the same time briefly > press door opener key (right) repeatedly (until desired ring tone is found)



Technical specifications subject to change without notice!

● ● Status LEDs ●



Doorbell Door opener

● on	Door closed & locked	Door
☀ flashes every 2 sec	Door closed & unlocked	
● on	No contact	Establishing Contact
● blinks every 2 sec	New message	
○ briefly off after 1 sec	Missed the ringing by less than 5 min	
○ briefly off after 2 sec	Missed the ringing by more than 5 min	Error
● on	Device error	
☀ flashes every 4 sec	Emergency operation	
☀ flashes every 3 sec	Battery is empty	