



# Radio Frequency Range

digi-MOD RL-DM1100

## **Single Input SD Digital Modulator**

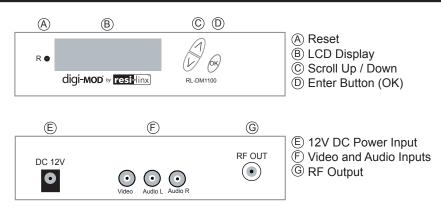

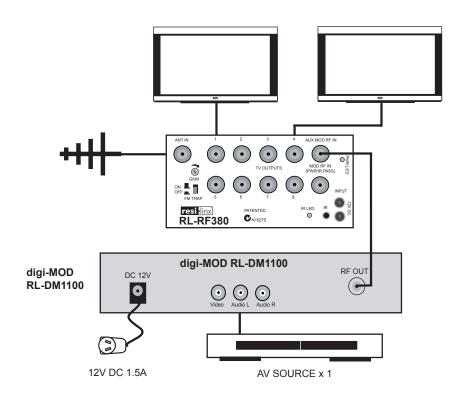

#### **Hardware Connection**

- 1. Connect the RCA cable from the video source (eg: Cable TV, Pay TV, DVD, VCR, Camera) to the yellow RCA Video Input (F) (video) on the rear of the RL-DM1100 Modulator.
- Connect the RCA cable from the audio source to the red/white Audio Inputs (Audio L Audio R) (F) on the rear of the RL-DM1100 Modulator.
- Connect the RF Output ⑤ from the RL-DM1100 to the Modulator Input on the RF Distribution Module RL-RF380. Alternatively connect the RF Output ⑥ to an existing distribution system or directly to a television set.
- 4. Connect the supplied 12V DC Switch Mode Power Supply to the Power Input (E).

## **Initial Startup**

- Power Up the digi-MOD
- 2. Enter Password "0000" and press "OK"
- 3. Wait until digi-MOD reads "Running" then enter the menu by selecting the "OK" button
- 4. The LCD screen will now display "ADVANCED MENU OUTPUT CHANNEL" select the "OK" button
- 5. The LCD screen will now display "OUTPUT CHANNEL 21" with the frequency in MHz. In some TV sets Channel 21 is not available, so it is recommended to change this to appropriate available output channel to suit your installation (40, 50, 60 etc.) Once you have scrolled and selected a channel number, Select "OK" to lock in the change
- Change any other settings via the "MENU" as required (refer to Technical Specifications)
- Once finished programming use the "UP" scroll button until the LCD display reads "ADVANCED MENU EXIT", select "OK"
- 8. The LCD will now read "EXIT, EXIT MENU". Select "OK". The LCD display will now show "Running"
- 9. Auto Scan for Channels on the TV set with the digi-MOD connected and powered.
- Sources for selected digi-MOD Channel selection, (e.g channel 40), are found on TV channels 101 (adjustable - refer to Programming LCN)

NOTE: If the digi-MOD is powered down, there is no need to reconfigure. All settings will remain unless a factory default is done.

### **Programming**

**CHANNEL NAME** can be changed by using the Scroll "UP" key until you reach "CHANNEL NAME". Use the UP/DOWN scroll keys to change each letter. Click "OK" to confirm channel name change.

**LCN** (Logic Channel Number) can be moved from its default position (101, 102, 103 and 104) to a different channel number (e.g. 4, 5, 6, 8) by scrolling UP/DOWN in the LCN option for each channel. Once selected, press the "OK" button to lock your channel change.

NOTE: Repeat this process for each Input of your digi-MOD Modulator.

#### Installing multiple digi-MOD's in an installation

Please ensure each digi-MOD has different settings in the categories below if you are installing 2 or more in an installation.

**OUTPUT CHANNEL** 

STREAM ID

**CHANNEL NAME** 

LCN

NOTE: Failure to change the above settings will result in conflict and will not install all channels correctly.

### **Safety Precautions**

- Do not apply power to the DVB-T Digital IR Modulator until all components have been installed and all wiring has been properly terminated. Failure to do so may result in damage to the product and void manufacturer's warranty
- Do not attempt to terminate, change or un-install any wiring without first unplugging Power Adapter from the DVB-T Digital IR Modulator
- Do not expose any component to moisture. Doing so can create electrical hazards or render the component unusable. Exposure to moisture will also void the warranty on the system.
- This modulator is powered with a voltage of 12 VDC. The power supply voltage must not exceed this, otherwise this
  modulator could suffer irreparable damage and subsequent invalidation of the warranty.

#### Note:

- Do not replace the power supply with a voltage greater than 12 VDC.
- Do not connect the modulator to the power if the power cord is damaged.
- Do not plug the modulator into the mains supply until all cables have been connected correctly.
- Do not cut the cord.
- · Avoid placing the modulator next to central heating components and in areas of high humidity.
- Do not cover any modulator elements that could obstruct the ventilation slots and cause overheating.
- If the modulator has been kept in cold conditions for a long time, keep it in a warm room no less than 2 hours before
  plugging it into the mains.
- Do not place digi-MOD on top or underneath a PVR Device, as this could cause overheating.

#### **Technical Specifications**

SETTINGS	DEFAULT SETTINGS	OPTIONAL SETTINGS
Channel Output	21 UHF	6-69
FEC (forward error correction)	3/4	1/2, 2/3, 3/4, 5/6, 7/8
Guard Int	1/16	1/2, 1/4, 1/8, 1/16, 1/32
Attenuator	0	0-20dB
Constellation	64QAM	16QAM
OFDM Mode	8K	2K
RF Output	Normal	Inverted, C.W
Video Input	PAL	NTSC
Brightness	128	0-256
Contrast	128	0-256
Saturation	128	0-256
Sharpness	64	0-128
Hue	128	0-256
Cell ID	0	adjustable
Stream ID	1000	adjustable
Network ID	100	adjustable
ORG Net ID	10	adjustable
Network Name	rl-network	adjustable
Program Number	100	adjustable
Channel Name	CHANNEL-1	adjustable
LCN	101	adjustable
Aspect Ratio	4:3	16:9
LCN Mode	APN	EACEM, ITC, NorDig

INPUT		ОИТРИТ	
Video Input	CVBS	Output Level	85 dB V
Video Input Level	0.7-1.4 V (pp)	Output Impedance	75 Ω
Video Mode	PAL / NTSC	Channel Bandwidth	7 MHz / 8 MHz
Audio Input	Stereo	Output Level Adjustment	20 dB typ.
Audio Input Level	0.4 - 4.8 V (pp)	MER	>30 dB typ.
Input Connectors	Video (RCA) -Audio (RCA)	Connector Type	"F" Female
Input Impedance	75 Ω		

MODULATION		GENERAL	
Video Resolution	PAL 720x576 @25fps	Power Supply	12 VDC 1.5 AMP
Video Compression	MPEG2 MP@ML	Consumption	500 MA
Audio Compression	MPEG1 Layer II	Dimensions	235 x 145 x 35mm
		Weight	.955kg

#### WARRANTY

Vcomm Pty Ltd states that the warrant that the customer can rely on is that provided by the manufacturer. In the event of any warranty claim please contact us and we will forward it to the manufacturer. The manufacturer will then determine the extent of their liability. This expressly negates, to the extent possible by Australian law, any warranty reliance on Vcomm Pty Ltd.

